


### 3-6. Using the interior lights

## Interior lights list

Your Lexus is equipped with the illuminated entry system to assist in entering the vehicle. Owing to the function of the system, the lights shown in the following illustration automatically turn on/off according to the presence of the electronic key, whether the doors are locked/unlocked, whether the doors are opened/closed, and the “ENGINE START STOP” switch mode.

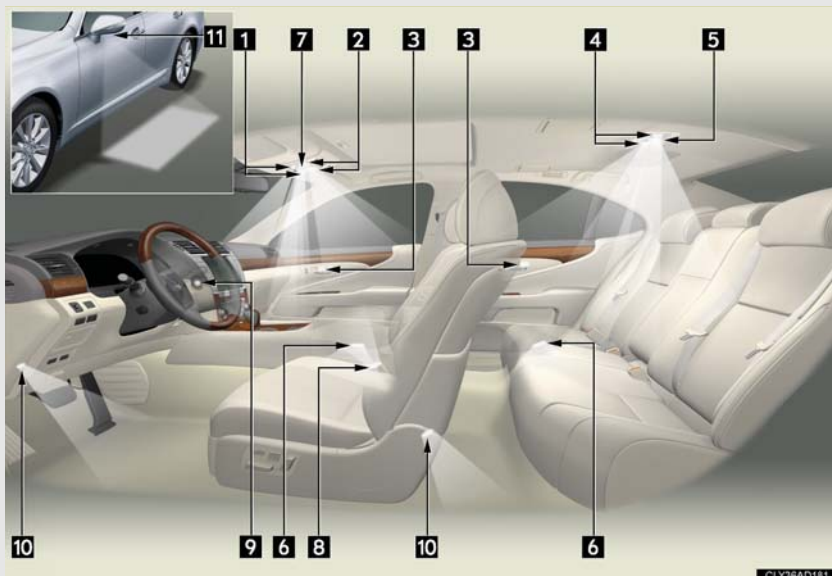

CLY36AD161

- 1 Front personal lights (→P. 564)
- 2 Front interior lights (→P. 563)
- 3 Inside door handle lighting
- 4 Rear personal lights (→ P. 564)
- 5 Rear interior light (→ P. 563)
- 6 Door courtesy lighting
- 7 Shift lever lighting (when the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode)

- 8 Seat belt buckle lighting
- 9 “ENGINE START STOP” switch lighting
- 10 Footwell lighting
- 11 Outer foot lights

Interior lights

► Front



- 1 “OFF”
- 2 Door position on/off
- 3 “ON”

► Rear



On/off

If door position on is selected for the front interior light, the rear interior light is also turned on/off by the opening and closing of a door.

Personal lights

► Front




On/off

► Rear (without rear seat entertainment system)



On/off

► Rear (with rear seat entertainment system)

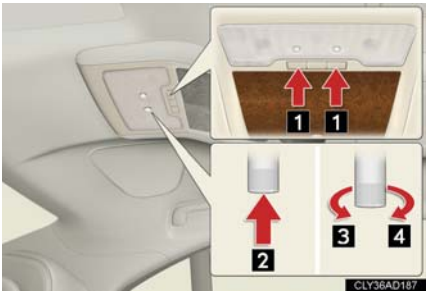

- 1 On/off
- 2 Press the knob to release it, and turn the knob to the desired brightness.
- 3 Darker
- 4 Brighter

---

■ **To prevent the battery from being discharged**

If the interior lights remain on when the door is not fully closed and the front interior light switch (door position on/ off) is on, the lights will go off automatically after 20 minutes.

■ **Customization**

Settings (e.g. The time elapsed before lights turn off) can be changed.  
(Customizable features →P. 778)